YDM3112도 큐 2012.6.15 5:26 PM 페이지 1 NO.3 PDF in

# User Guide

## YDM3112

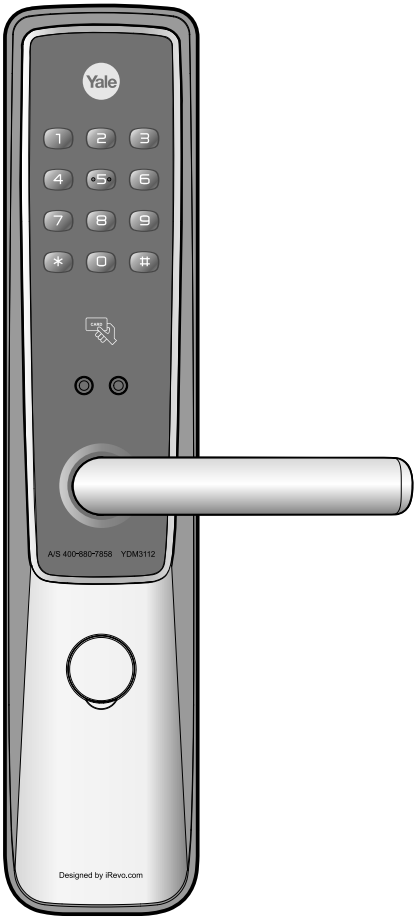


※ The functions and design of this product can be changed without prior notice for quality improvement.
※ Chinese manual is from 21 page. (中文说明书从第 21页)

# Introduction

For peace of mind, you need to secure yourself, your home and your personal belongings. Yale Digital Door Locks take care of all of this so that you can enjoy your life without any worries. In these products we have combined our long experience in making secure and reliable locks with the latest technology for convenience and safety.

With all the functions for convenience and safety, Yale Digital Door Locks clearly offer you more than just security. In addition to this, we have also put a lot of effort in the aesthetic design of these products, so that your Yale Digital Door lock can actually enhance the appearance of your door while securing it at the same time.

The future of locking is already here and ready for use. Get rid of all your concerns regarding the security of your home and use a Yale Digital Door Lock to unlock the door to the potential of your life.

Unlock your life!

http://www.yaledigital.com.cn (CHINA)
http://www.yalelock.com (APEC & EMEA)

The world's favorite lock

YDM3112도 큐 2012.6.15 5:26 PM 페이지 3 NO.3 PDF in

# Contents


**Getting Started**

Safety Precautions ..... 4
Product Features ..... 5
Quick Guide ..... 6

**Directions**

Components Overview ..... 8
Identification ..... 9
How to Use ..... 10
- User PIN Code
- Card Key
- Lock Door
- Open Door from Inside

Settings ..... 14
- Forced Lock
- Volume Setting
- Alert setting on mechanical override key use
- Auto Locking
- Passage Mode

Safety Feature ..... 17
- Alarm Feature
- 3-minute Lock Feature
- Open Door with Dicoy PIN Code
- Emergency mechanical key override

**Extra Features**

Emergency Power ..... 20
- Emergency Power Supply for discharged Batteries

Product Specification ..... 40

# Safety Precautions

## Please Read This Carefully

Do not install the product in an outdoor environment.

Do not attempt to disassemble the unit by yourself. That can cause an electronic shock and product damage.

Do not spray water directly to the product or wipe it with chemical substances such as benzene, thinner, or alcohol when cleaning the product.

Do not force with a tool.

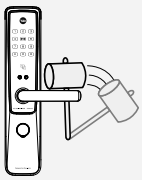

Be careful not to let any unauthorized users discover your PIN Code.

Please keep your PIN Code safe.

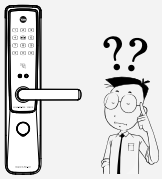


Make sure the door is locked when leaving Home.

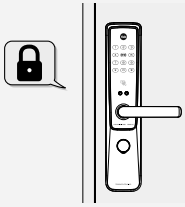

Be careful not to hit the handle as it may cause injuries.

Keep foreign materials away from the cardkey sensor to maintain it cleanly and do not use it with wet fingers.

⚠ Caution Make sure to follow the above instructions to avoid any injuries or damages on the properties .

YDM3112도 큐 2012.6.15 5:27 PM 페이지 5 NO.3 PDF in



# Product Features

### 1 Proximity card identification

You can use your ISO 14443 A type RFID card such as credit card or pass card as your Card Key.

### 2 Triple Access

You can unlock the door by the card, the security code or the mechanical key at your convenience. You do not need to worry about accidental lockouts by losing or forgetting the key.

### 3 Break-in / Damage alarm

80dB alarm will go off if anyone attempts to damage the lock or forces the door open.

### 4 Volume Control

You can change the volume. The break-in alarm still operates even if the silent mode is on.

### 5 Forced Lock Mode

Internal forced lock prevents anyone to unlock from the outside and external forced lock makes only manual thumbturn available to open the lock from the inside.

### 6 Tri-Directional Deadbolt

Tri-directional deadbolt toward the door frame and upward, downward offers extra security and piece in mind.

# Quick Guide

## 1 Registering User PIN Code

Press (I) (Registration) button

Enter User PIN Code (6 to 12 digits)

Press (I) (Registration) button

## 2 Registering Card Key

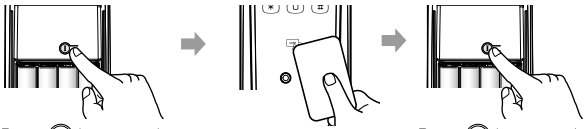

Press (I) (Registration) button

Contact **all the keys** you wish to register on one by one

Press (I) (Registration) button

## 3 Locking the Door from the outside

Lift outer handle up after Closing the door to lock the door securely.

Locking with the handle

## 4 Unlocking the Door from the outside

① Contact the Card key on Card key reader, or

② Wake up the lock with the palm touch, enter the User PIN Code and retouch the lock with the palm.

③ Press the outer handle down to open the door.

Opening with the handle

## 5 Locking / Unlocking the Door from the inside.

Operate the handle to lock or open.

– To lock the door securely, lift up outer handle

– To unlock the door, lift up outer handle down

Locking with the handle

Opening with the handle

## 6 Emergency mechanical override key

Please operate the lock with the mechanical override key when you have a Problem with locking or opening, for example:

- Forgotten User PIN Code
- Electronic malfunction

YDM3112도 큐 2012.6.15 5:27 PM 페이지 7 NO.3 PDF in

## Directions


Components Overview ..... 8

Identification ..... 9

How to Use ..... 10

- User PIN Code
- Card Key
- Lock Door
- Open Door from Inside

Settings ..... 14

- Forced Lock
- Volume Setting
- Alert setting on mechanical override key use
- Auto Locking
- Passage Mode

Safety Feature ..... 17

- Alarm Feature
- 3-minute Lock Feature
- Open Door with Dicoy PIN Code
- Emergency mechanical key override

# Components Overview

## Basic Contents

The contents of this product may be subject to change without notice for performance or quality improvement.

### ≫ Basic Contents

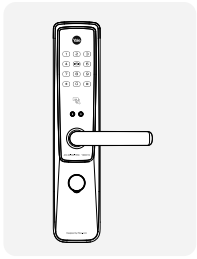

Front Body

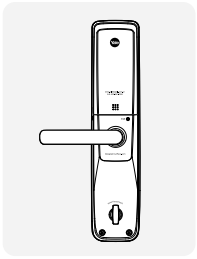

Back Body

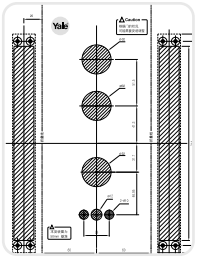

Installation Template

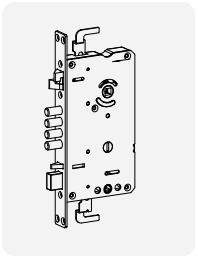

Lock case

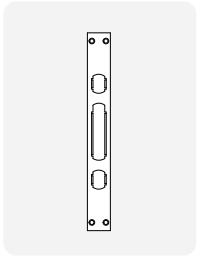

Strike Plate

User Guide

4 Batteries
2 Mechanical override keys
Bolt
4 CardKeys
Front Shaft

YDM3112도 큐 2012.6.15 5:27 PM 페이지 9 NO.3 PDF in



# Identification

## Front Body

(Front Body, install on the outside of the door)

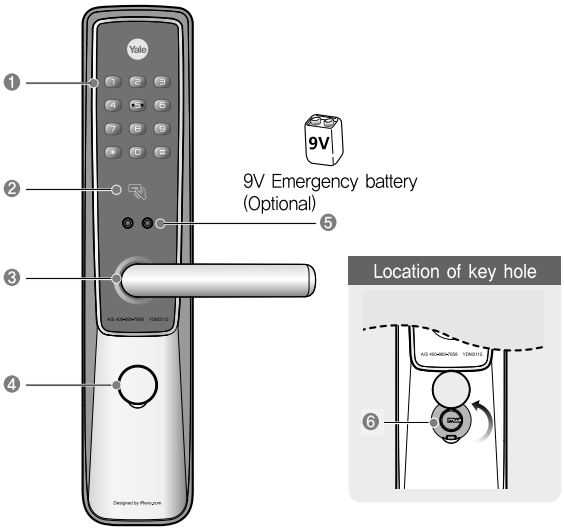


| | |
|---|---|
| ❶ | Keypad (10-Key) |
| ❷ | CardKey Reader |
| ❸ | Outer Handle |
| ❹ | Cover of key hole |
| ❺ | Emergency Power Supply Terminal |
| ❻ | Location of key hole |

## Back Body

(Back Body, install on the inside of the door)

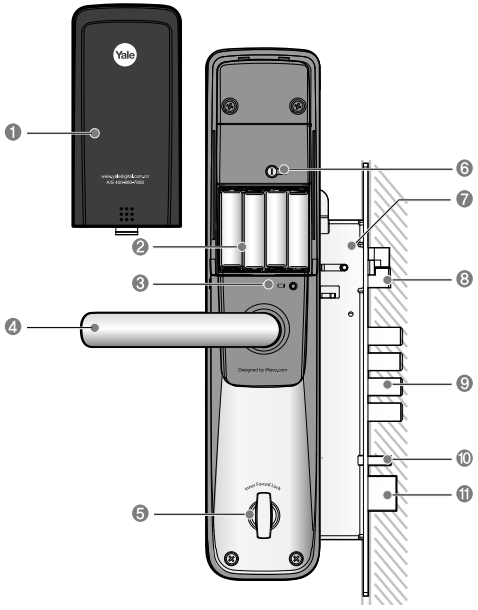

| | |
|---|---|
| ❶ | Battery Cover |
| ❷ | 1.5V AA Alkaline Batteries |
| ❸ | Low battery Indicator |
| ❹ | Inner Handle |
| ❺ | Internal Forced Lock knob |
| ❻ | Ⓘ Registration button |
| ❼ | Lock case |
| ❽ | Latch Bolt |
| ❾ | Dead Bolt |
| ❿ | Edge Bolt |
| ⓫ | Inner Forced Lock Bolt |

# How to Use

## To Use User PIN Code

User PIN Code should be set within 6 to 12 digits. [*] and [#] are not allowed.

### ≫ To Register User PIN Code

| Step | Icon | Description |
|---|---|---|
| 1 Press Ⓘ (Registration) button | | Open the battery cover in the Back Body and press Ⓘ (Registration) button once. |
| 2 Enter the User PIN Code | | Enter the User PIN Code you wish to register. (6 to 12 digits) |
| 3 Press Ⓘ (Registration) button | | Press the Ⓘ (Registration) button in the Back Body again to complete the User PIN Code registration. |

### ≫ To Open Door with User PIN Code

| Step | Icon | Description |
|---|---|---|
| 1 Enter Any button | | Enter any button. |
| 2 Enter User PIN Code | | Enter the Registered User PIN Code in the keypad. |
| 3 Enter * | | Enter * to confirm. |

**Note**

- Make sure to leave the door open when registering a User PIN Code because you may accidentally lock a door while trying to register or change a User PIN Code the first time.
- The previously registered User PIN Code will automatically be deleted when the new User PIN Code is registered.

YDM3112도 큐 2012.6.15 5:27 PM 페이지 11 NO.3 PDF in



# How to Use

## To Use Card Key

### ≫ To Register Card Key

| Step | Icon | Description |
|---|---|---|
| 1 Press Ⓘ (Registration) button | | Open the battery cover in the Back Body and press Ⓘ (Registration) button once. |
| 2 Contact all the Card Keys you wish to register on the [Card Key reader] one by one | | If you hear a "pik" sound, the Card Keys are registered. If you hear a "ti-to-ti-to" sound, the Card Key had been already registered. |
| 3 Press Ⓘ (Registration) button | | Press the Ⓘ (Registration) button in the Back Body again to complete the Card Key registration. |

### ≫ To Open Door with Card Key

| Step | Icon | Description |
|---|---|---|
| Contact Card Key | | Contact Card Key |

**Check if the door opens!**

Make sure to examine if the door opens normally with the registered User PIN Code after the registration is complete.

**Note**

- Keep the door open while you register Card Key to prevent yourself from accidentally getting locked out.
- The previously registered Card key will automatically be deleted when the new Card key is registered.

# How to Use

## Lock Door

### ≫ To Close Door from Outside

| Step | Icon | Description |
|---|---|---|
| Flip Lift up the handle | OUTSIDE | To lock the door securely, lift outer handle up after the door was closed. |

※ After 1 minute, the outer handle will disengage automatically to lock the door with latch bolt only.

※ Please lift the outer handle up to secure dead-locking when you go out.

### ≫ To Close Door from Inside

| Step | Icon | Description |
|---|---|---|
| Flip Lift up the handle | INSIDE | To lock the door securely, lift up outer handle. |

**⚠ Caution**

• If the handles are not lifted to securely lock your door, the door is held on the latch only. Please make sure to lock your door securely with lifting the handle up before you leave.

YDM3112도 큐 2012.6.15 5:27 PM 페이지 13 NO.3 PDF 인



# How to Use

## Open Door from Inside

### ≫ To Open Door from Inside.

Press and push the inner handle to open the door.

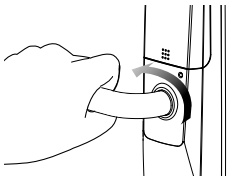

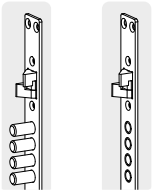

(Closed) (Open)

# Settings

## Forced Lock

### ≫ Outside Forced Lock Setting – CARD

| Step | Icon | Description |
|---|---|---|
| Contact Card Key | | Contact the Card Key on [Card Key reader] for 5 seconds until you hear 3 beeps. |

### ≫ Outside Forced Lock Setting – User PIN Code

| Step | Icon | Description |
|---|---|---|
| 1 Enter Any button | | Enter any button. |
| 2 Enter User PIN Code | | Enter the registered User PIN Code on the keypad. |
| 3 Enter # for 5 seconds | | Enter the # for 5 seconds. (The beeping sound sets off for 3 times.) |

### ≫ Inside Forced Lock Setting

| Step | Icon | Description |
|---|---|---|
| Set / Release inside Forced Lock knob. | | When the door is closed, turn the Inside Forced Lock knob to LOCK or **UNLOCK** position |

**Note**

- If you open a door with the handle from inside in outside forced lock, the alarm will sound.
- If the Inside Forced Lock is set, any attempt to open a door from the outside whether it is with a Card Key or a User PIN Code this will not work.

YDM3112도 큐 2012.6.15 5:27 PM 페이지 15 NO.3 PDF in



# Settings

## Volume Setting Feature

It enables you adjust the sound volume.

The default setting is high.

### ≫ Volume Setting (Default setting)

| Step | Icon | Description |
|---|---|---|
| 1 Press Ⓘ (Registration) button and # | | Open the battery cover in the Back Body.<br>Press Ⓘ (Registration) button and then [#]. |
| 2 Enter number | | Mute : number 3, 0<br>Low : number 3, 1<br>High : number 3, 3 |
| 3 Press Ⓘ (Registration) button | | Press Ⓘ (Registration) button again in the Back Body. |

## Alert setting on mechanical override key use (ON/OFF)

### ≫ To Set Alert setting on mechanical override key use

| Step | Icon | Description |
|---|---|---|
| 1 Press Ⓘ (Registration) button and # | | Open the battery cover in the Back Body.<br>Press Ⓘ (Registration) button and then [#]. |
| 2 Enter number 0 and 8 on the keypad | | Enter number 0 and then 8 again on the keypad. |
| 3 Press Ⓘ (Registration) button | | Press Ⓘ (Registration) button again in the Back Body. |

**Note**

• This alert setting toggles between activation and deactivation of the alert setting.

# Settings

## Auto Locking Mode

Auto lock setting locks a door in 1 minute after the door was closed.

The default setting is Auto Locking Mode.

### ≫ To Set Auto Locking Mode

| Step | Icon | Description |
|---|---|---|
| 1 Press Ⓘ (Registration) button and # | | Open the battery cover in the Back Body.<br>Press Ⓘ (Registration) button and then [#]. |
| 2 Enter number 0 and 1 on the keypad | | Enter number 0 and then 1 again on the keypad. |
| 3 Press Ⓘ (Registration) button | | Press Ⓘ (Registration) button again in the Back Body. |

## Passage Mode

### ≫ To Set Passage Mode

| Step | Icon | Description |
|---|---|---|
| 1 Press Ⓘ (Registration) button and # | | Open the battery cover in the Back Body.<br>Press Ⓘ (Registration) button and then [#]. |
| 2 Enter number 0 and 3 on the keypad | | Enter number 0 and then 3 again on the keypad. |
| 3 Press Ⓘ (Registration) button | | Press Ⓘ (Registration) button again in the Back Body. |

**Note**

- The passage mode enables you to open your door at anytime and from any side.
- The red lamp flashes every 7 second in passage mode.
- Please make sure to lock securely after using the passage mode.

YDM3112도 큐 2012.6.15 5:27 PM 페이지 17 NO.3 PDF in



# Safety Feature

## Alarm Feature

The alarm sound continues for 30 minutes or until it is reset.

### ≫ Damage Alarm

Damage: When the Front Body was damaged due to forced separation or drilling, the alarm will sound.

**To Release Damage Alarm**

Method ❶ Enter the registered User PIN Code.
Method ❷ Enter the registered Card Key.
Method ❸ Press the interior ⓘ button for 5 seconds.

## 3-minute Lock Feature

At 3-minute Lock mode, no button, will work except the button inside.

### ≫ 3-minute Lock Mode Display

• If incorrect security codes or unregistered Card Keys are attempted 5 times in a row, it will lock out for about 3 minutes with the blinking LED.

**To Release 3-minute Lock**

Method ❶ Press the ⓘ button.
Method ❷ Turn the inside handle.

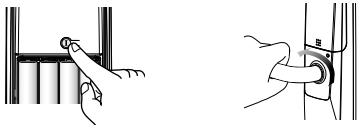

**Note**

• If the alarm sounds due to damage, the numbers on the keypad will be lit up and rotated. (It repeats the status for 30 minutes with an alarm sound.)
• 3-minute Lock mode will not affect the alarm mode and is sustained even after the product is rebooted.

# Safety Feature

## Open Door with Dicoy PIN Code

It is the most effective feature when you are concerned about the User PIN Code being accidentally exposed.

### ≫ To Open Door with Dicoy PIN Code

| Step | Icon | Description |
|---|---|---|
| 1 Enter Any button | | Enter any button. |
| 2 Enter the Dicoy PIN Code and a User PIN Code | | Method ❶ Enter the Dicoy numbers* ➡ PIN Code<br>Method ❷ Enter the PIN Code ➡ Dicoy numbers*<br>*any that you choose do not have to be the same. |
| 3 Enter * | | Enter * to confirm. |

## Emergency mechanical key override

### ≫ Emergency mechanical key override

- Operate the lock with the mechanical key when there is a problem to the lock or unlock the door that is the same as below listed.
- Forgotten User PIN Code
- Electronic malfunction

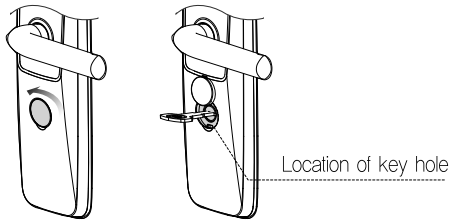


**Important**

- When opening the door with mechanical key, the alarm will sound. (When the setting is on activation)
- On inner forced locking, the door cannot be opened even with the mechanical key

**Note**

- Once 3-minute Lock mode is on, the Dicoy PIN Code mode will not work until the next normal verification (Card Key verification, User PIN Code, open door from inside). In this case, please open a door with User PIN Code.
- Keep the mechanical override key in a safe place.
- Otherwise, you may not get a free service within during the warranty period.

YDM3112도 큐 2012.6.15 5:27 PM 페이지 19 NO.3 PDF/m

## Extra Features

Emergency Power ..... 20

Emergency Power Supply for Discharged Batteries

# Emergency Power

## Emergency Power Supply for Discharged Batteries

You may open a door when contacting the 9V battery.

### ≫ To Supply Emergency Power

| Step | Icon | Description |
|---|---|---|
| 1 Contact the 9V Alkaline battery |  | Open the emergency cover. Keep contacting the 9V Alkaline battery onto the emergency power supply terminal. |
| 2 Enter Any button | | Enter any button. |
| 3 Enter User PIN Code | | Enter each number of User PIN Code. |
| 4 Enter ✱ | | Enter ✱ to confirm.<br>(Once the motor is fully operated, you may detach the 9V battery.) |

### ≫ To Replace Battery

**1** Expiry Period

The product uses four 1.5V Alkaline AA batteries. They may sustain 1 year if used 10 times a day.
(Users are advised to use authentic alkaline batteries.)

**2** Low Battery Alarm

You must replace all 4 batteries for the following cases:
* The Low Battery Lamp on the Back Body lights on
* The alarm melody will sound
(a nursery rhyme starting with ting-a-ling melodies)

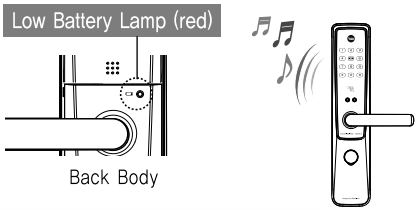


**Note**

• The battery life vary depending on temperature, moisture levels, Frequency of use and the quality of the batteries.

YDM3112도 큐 2012.6.15 5:27 PM 페이지21 NO.3 PDF.in

# 中文简单说明书

# 注意事项

## 注意事项!

避免户外安装使用.

任意拆装及重新组装会
造成故障.

不要用水或化学
物质清洁表面.

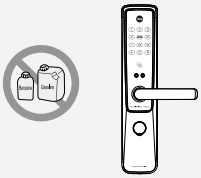

请勿使用任意工具
对产品进行冲撞.

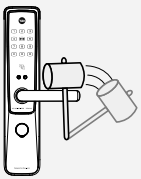

请严格管理登记的密码.

外出时，请确认门是否锁上.

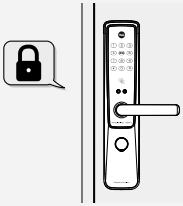

转把手时,
请注意以免碰撞

为确保卡钥匙的清洁度,
请使其远离异物,
不要在手指湿润的情况下使用.

YDM3112도 큐 2012.6.15 5:27 PM 페이지23 NO.3 PDF.in



# 产品特征

### 1 一卡多用

所有符合ISO14443 A 技术标准的卡(如交通卡)均可替代门卡.

### 2 三种开启方式

可以用接触钥匙和登记的密码开启. 紧急情况下，还可以使用机械钥匙开启.

### 3 侵入及破损警报

当有强行侵入或对锁具的破坏时，产品自动报警.

### 4 声音调整功能

可以调整其工作声音而不影响到他人休息.

### 5 强制锁定模式

可以从外部或内部设定强制锁定模式，以便安全的使用.

### 6 多方向锁定

针对门框、上、下的多方向锁点提供了额外的安全性，省心又省力。

# 快速使用指南

## 1 登记密码

① 按一下
[登记键]

输入密码
(6~12位)

① 按一下
[登记键]

## 2 登记卡钥匙

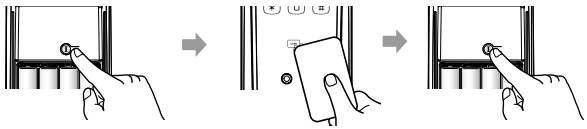

① 按一下
[登记键]

把要登记的卡钥匙依次接触到
[卡钥匙接触部]

① 按一下
[登记键]

## 3 从外部锁定

为了确定锁定,
门关上后, 必须向上抬起把手

用把手锁定（向上旋转）

## 4 从门外开启门锁

(方法#1) 输入已登记的密码后触摸密码键, 向下旋转把手

(方法#2) 接触已登记的卡钥匙后, 向下旋转把手

用把手开启门锁（向下旋转）

## 5 从门内开启或关闭门锁

旋转把手开启或关闭门锁

关闭门锁

开启门锁

## 6 紧急机械钥匙

由于以下原因无法开启或关闭门锁时,
请用紧急机械钥匙开启/关闭门锁

- 忘记[使用者]密码
- 电子系统不能正常工作

YDM3112도 큐 2012.6.15 5:27 PM 페이지25 NO.3 PDF/m

## 使用方法


**产品规格** ..... 26

部件介绍
各部位名称(室外部)
各部位名称(室内部)

**使用方法** ..... 28

使用密码
使用卡钥匙
门锁定
从内部开启

**设置方法** ..... 32

强制锁定功能
音量调节功能
使用机械钥匙时，警报设定/解除
自动锁定功能·随通功能

**安心功能** ..... 35

警报功能
3分钟自动锁死
虚数密码功能
紧急机械钥匙

# 产品规格

## 基本构成品

为了提升产品功能和质量所作的内部结构的更改，恕不另行通知。

### 》 构成品

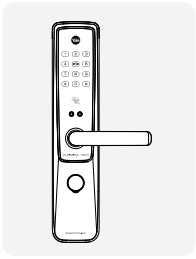

前壳(室外部)

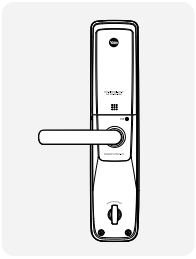

内壳(室内部)

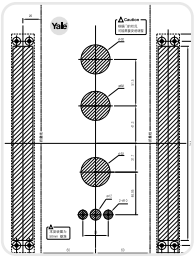

安装图

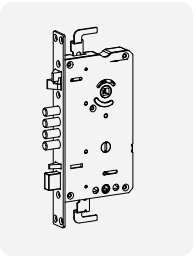

锁芯

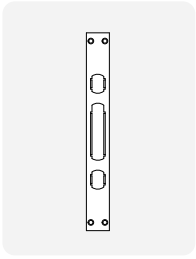

锁扣片

说明书

4个电池
机械钥匙
螺丝
卡钥匙
外锁连杆

YDM3112도 큐 2012.6.15 5:27 PM 페이지27 NO.3 PDF.in



# 各部位名称

## 前壳(室外部)

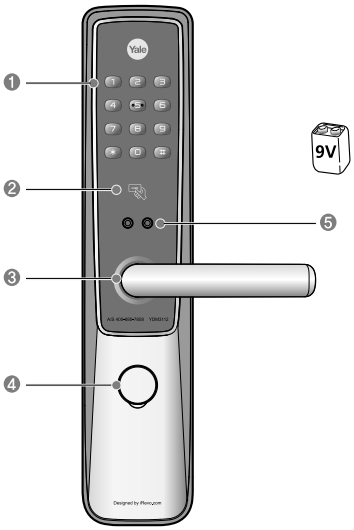

9V 紧急电池
(另购)

滑开紧急备用盖

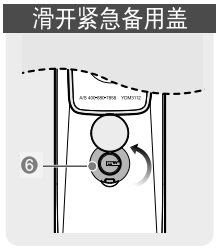


| | |
|---|---|
| ❶ | 智能密码键盘 |
| ❷ | 卡钥匙接触部 |
| ❸ | 把手(室外部) |
| ❹ | 机械钥匙洞盖 |
| ❺ | 紧急电源接触口 |
| ❻ | 机械钥匙锁芯 |

## 内壳(室内部)

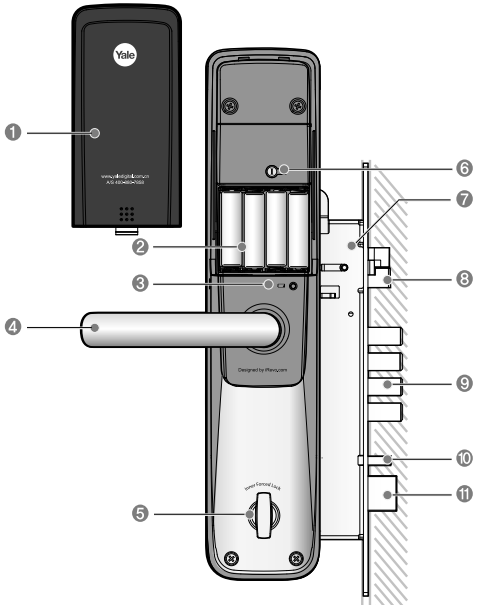


| | |
|---|---|
| ❶ | 电池盖 |
| ❷ | 1.5V AA 电池 |
| ❸ | 更换电池提示灯 |
| ❹ | 把手(室内部) |
| ❺ | 内部强制锁定旋钮 |
| ❻ | ⓘ 登记按键 |
| ❼ | 锁芯 |
| ❽ | 斜舌 |
| ❾ | 锁舌(方舌) |
| ❿ | 锁栓 |
| ⓫ | 内部强制锁定锁舌 |

# 使用产品

## 密码使用方法

密码设定时，不能使用 ＊和 ＃键

》登记 密码 ➡ ①，密码(6~12位)，①

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 1 按 ① [登记键] | | 打开室内部的电池盖后，按 ① [登记键] |
| 2 输入要登记的密码 | | 输入要登记的6~12位密码。 |
| 3 按 ① [登记键] | | 再按 ① [登记键]，密码登记结束 |

》用密码开启

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 1 按密码键盘上的任意按键 | | 用手指按密码键盘上的任意按键 |
| 2 输入已登记的密码 | | 输入已登记的密码(6~12位) |
| 3 按＊键 | | 按＊键，开启 |

参考

- 登记密码或更改密码时，请开着门操作，以免造成失误.
- 每次密码变更时，之前登记的密码会自动删除

YDM3112도 큐 2012.6.15 5:27 PM 페이지29 NO.3 PDF.in



# 使用产品

## 卡钥匙使用方法

》登记卡钥匙

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 1 按 ① [登记键] | | 打开室内部的电池盖后，按 ① [登记键] |
| 2 接触卡钥匙 | | 把要登记的所有卡钥匙依次接触到[卡钥匙接触部]. |
| 3 按 ① [登记键] | | 再按 ① [登记键]，卡钥匙登记结束. |

》用卡钥匙开

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 接触已登记的卡钥匙 | | 在室外部的[卡钥匙接触部]，接触已登记的卡钥匙. |

**确认是否正常登记**



登记卡钥匙结束后，
必须再次确认是否正常开启.

参考

- 首先要登记密码，以免丢失卡钥匙时不能开门
- 每次重新登记卡钥匙时，已登记的卡钥匙自动失效.
- 最多可以登记 40个卡钥匙.

# 使用产品

## 锁定门

》从外部锁定

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 室外部的把<br>手向上旋转 | <br>室外部 | 出门后， 把室外部的把手向上旋转锁定. |

※ 出门时，必须把室外部的把手向上旋转锁定.

》从内部锁定

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 室内部的把<br>手向上旋转 | <br>室内部 | 握住把手按钮，把室内部的把手向上旋转锁定. |

⚠ 注意

- 如果把手没有向上转到位，则不能锁定. 请注意将把手旋转到锁定位置.

YDM3112도 큐 2012.6.15 5:27 PM 페이지31 NO.3 PDF.in





## 从内部开启

生产出厂时，初始状态是安全把手模式.

》在解除[安全把手模式]下，开启

直接转动室内部的把手开启

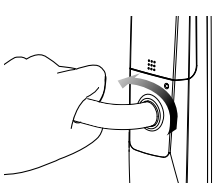



(锁定)



(开启)

参考

- 请确保熟练掌握安全把手的使用方法. 以防紧急事件发生时，无法开启门锁.

# 设置方法

## 强制锁定功能

### 》外部强制锁定 - 用卡钥匙

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 接触卡钥匙5秒 | | 把[卡钥匙]接触在[卡钥匙接触点]5秒<br>➡ 3次 "BIK"的声音 |

### 》从外部强制锁定 - 用密码

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 1 按密码键盘上的任意按键 | | 用手指按密码键盘上的任意按键 |
| 2 输入已登记的密码 | | 输入已登记的密码 |
| 3 长按 # 键5秒以上 | | 长按 # 键5秒以上<br>(3次“BIK”的声音) |

### 》内部强制锁定设置

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 设置或取消内部强制锁定开关 | | 当门锁关闭时,打开内部强制锁定开关来锁定或取消当前状态 |

参考

- 一旦发出警报声，解除警报之前，警报会继续30分钟

YDM3112도 큐 2012.6.15 5:27 PM 페이지33 NO.3 PDF in



# 设置方法

## 声音设定功能

可调节音量

默认音量为高

》音量设置（默认设置）

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 1 按 ⓘ 键（登记键）后，按 # 键 | | 在室外部的前壳，滑开前盖. |
| 2 按数字键 | | 无声：数字键 3，0<br>低音：数字键 3，1<br>高音：数字键 3，3 |
| 3 按 ⓘ 键（登记键） | | 再按 ⓘ 键(登记键) |

## 使用机械钥匙时，警报设定/解除

》警报设定

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 1 按 ⓘ [登记键]后，按 # | | 滑开室内部的电池盖后，按 ⓘ [登记键]，再按 # |
| 2 按 0 后，按 8 | | 在室外部密码键，按 0 后，再按 8 |
| 3 按 ⓘ [登记键] | | 按 ⓘ [登记键]，设定完成 |

参考

- 设定警报时，并每回可设定或解除.

# 设置方法

## 自动锁定功能

自动锁定设置在关门后1分钟内锁定门锁.

》设置自动锁定模式 ➡ 按 Ⓘ , #, 0, 1, Ⓘ

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 1 按 Ⓘ [登记键]<br>按 # | | 滑开室内部的电池盖后，按 Ⓘ [登记键]<br>➡ 再按室外部密码键的 # |
| 2 按 0, 1 | | 按室外部密码键的 0 后 ➡ 再按 1 |
| 3 按 Ⓘ [登记键] | | 再按 Ⓘ [登记键]，设定完成 |

## 随通功能

》设置随通模式 ➡ 按 Ⓘ , #, 0, 3, Ⓘ

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 1 按 Ⓘ [登记键]<br>按 # | | 滑开室内部的电池盖后，按 Ⓘ [登记键]<br>➡ 再按室外部密码键的 # |
| 2 按 0, 3 | | 按室外部密码键的 0 后 ➡ 再按 3 |
| 3 按 Ⓘ [登记键] | | 再按 Ⓘ [登记键]，设定完成 |

参考

- 随通模式下，你可以随时从任何方向通过旋转把手开启门锁.
- 闪烁的红灯表示把手处于随通模式下.
- 在随通模式下，请确保是否门正常上锁.

YDM3112도 큐 2012.6.15 5:28 PM 페이지35 NO.3 PDF in



# 安心功能

## 警报功能

如没有解除警报状态，警报声音持续30分钟。

### 》侵入/破损警报

侵入：从外部破坏门侵入时，
警报声音发生

破损：从外部破坏锁体时，
警报声音发生

**解除侵入/破损警报**

方法① ：输入已登记的密码
方法② ：把已登记的卡钥匙接触到卡钥匙接触部.
方法③ ：按室内部的 ① [登记键]5秒

## 3分钟自动锁死功能

在[3分钟自动锁死]状态下，不能操作室外部的锁体。

### 》3分钟自动锁死显示

卡钥匙和密码连续进行5次错误操作，
本产品会自动停止3分钟。
智能密码键盘显示剩下的时间

**解除[3分钟自动锁死]**

方法① ：按时内部的 ① [登记键]
方法② ：转室内部的把手，开启。
方法③ ：用机械钥匙，开启

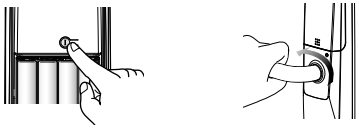

**参考**

- 在损坏报警状态下，键盘上的数字会顺时针方向自动亮灯
  (这种状态会持续和报警音一起保持30分钟)
- 3分钟锁定不会影响报警状态，而且重启后会继续保持这种状态.

YDM3112도 큐 2012.6.15 5:28 PM 페이지36 NO.3 PDF in

# 安心功能

## 虚数密码功能

害怕密码被盗时，加虚数密码防止密码泄露。

### 》用虚数密码开启

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 1 按密码键盘上的任意按键 | | 用手指按密码键盘上的任意按键 |
| 2 输入虚数密码和已登记的密码 | | 方法① ： 虚数密码 ➡ 已登记的密码<br>方法② ： 已登记的密码 ➡ 虚数密码<br>(不要以已登记的密码作为虚位密码) |
| 3 按＊ 键 | | 按＊ 键，开启 |

## 紧急机械钥匙使用方法

### 》 紧急机械钥匙使用方法

如出现忘记密码，电池电量耗尽或电子系统异常无法运作等紧急情况时用紧急备用钥匙可锁门或开门
将室外部的紧急备用机械锁该起开，
可看到紧急备用钥匙孔
对准紧急备用钥匙孔，
插入钥匙并旋转可锁门或开门

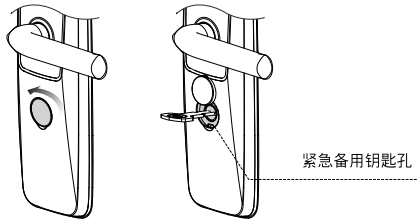


**⚠ 注意** **警报设定状态下，使用机械钥匙时会发生警报音**
**在内部强制锁定状态下，使用机械钥匙不能开启.**

参考

- 当3分钟锁定模式开启时，虚数密码功能将不能工作直到下一个正常模式被确认（卡，密码，从门内开启）. 在这种情况下，请使用正确密码开启门锁。
- 妥善保管机械钥匙.
- 请保管好品质保证书，否则，在保证期内无法获得免费售后服务.

YDM3112도 큐 2012.6.15 5:28 PM 페이지37 NO.3 PDF.in

## 其他事项

常见问题及解决方法 ..... 38

电池耗尽情况下 / 从外部提供电源的方法

申请维修方法

产品规格明细 ..... 40

# 常见问题及解决方法

## 电池耗尽情况下，从外部提供电源的方法

### 》 从外部提供电源的方法

| 顺序 | 操作 | 具体方法 |
|---|---|---|
| 1 与电池口接触 9V碱性电池 | | 使用9V碱性电池与紧急电池口接触 |
| 2 按密码键盘上的任意按键 |  | 按密码键盘上的任意按键 |
| 3 输入已登记的密码 | | 输入已登记的密码 |
| 4 按＊ 键 | | 按＊ 键<br>(一旦马达正常工作，可拔下9V电池) |

### 》 电池更换方法

**1 电池使用寿命期**

本产品使用4节1.5V 碱性AA型号电池。
每天使用10次为标准可使用1年。(正品碱性电池)

**2 更换电池提示**

使用本产品时，如有随着提示音
或电池更换警告灯闪烁提示，请更换全部电池

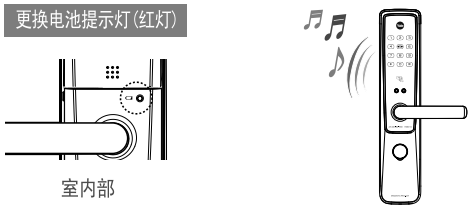


参考 按电池使用的环境(温度, 湿度, 使用量)和电池品质，电池寿命期会有不一样

YDM3112도 큐 2012.6.15 5:28 PM 페이지39 NO.3 PDF in



# 常见问题及解决方法

## 申请维修方法

产品出现异常时，请与安装点(销售点)联系。
产品保修期间可以无偿享受A/S。
但是因消费者使用不当出现A/S或超过保修期，被认定为有偿A/S。

### ■ 消费者维修类型

(产品保修期为购买之日起一年)

| 消费者维修标准 | | 维修内容 | |
|---|---|---|---|
| | | 保修期以内 | 保修期以后 |
| 在正常使用状态下 | 购买安装后，12个月以内出现故障时 | 免费修理 | 有偿修理 |
| | 出现同样的故障2次时 | 免费修理 | 有偿修理 |
| | 出现同样的故障3次时 | 更换产品 | 有偿修理 |
| | 无修理用部件时 | 更换产品 | 有偿修理 |
| 非正常使用状态下 | 消费者失误造成的损坏 | 有偿修理 | 有偿修理 |
| | 电池等消耗品的更换 | 有偿修理 | 有偿修理 |
| | 产品原使用目的外的使用引起的的故障及损坏 | 有偿修理 | 有偿修理 |
| | 故意或消费者自行拆装等原因引起的故障及损坏 | 有偿修理 | 有偿修理 |
| | 丢失密码时的拆装 | 有偿修理 | 有偿修理 |
| 因意外灾害<br>(如火灾，水灾，煤气事故等所出现的故障) | | 有偿修理 | 有偿修理 |

没有或遗失产品保修卡时被认定为有偿A/S，所以请务必保管好产品保修卡及发票。

⚠ 注意　没有或丢失产品保修卡时被认定为有偿A/S,
所以请务必保管好产品保修卡及发票。

客户中心
400-880-7858

公司网站
www.yaledigital.com.cn
www.irevo.com.cn

# 产品规格明细

## 产品规格

| 构成物 | | 产品式样 | 备注 |
|---|---|---|---|
| 室外部 | | 72(W) × 343.6(H) × 29(D) mm | 正规电压 ：DC 6V<br>动作温度 ：-15~55℃<br>感应动作温度：55℃ |
| 室内部 | | 72(W) × 343.6(H) × 40(D) mm | |
| 把手 | | 锌压铸件 | |
| 干电池 | | 1.5V 干电池 4节 | 一天10次使用标准<br>可使用一年 |
| 锁芯外壳 | | 钢及SUS304不锈钢 | |
| 选择 | 遥控器 | 无线 | 选择(另购) |

使用期限根据干电池寿命可能有所差异

YDM3112도큐 2012.6.15 5:28 PM 페이지41 NO.3.PDF

# 产品保修卡

| | | | | | |
|---|---|---|---|---|---|
| S/N | | 购买<br>日期 | | 型号 | |
| 客户<br>姓名 | | | 地址 | | |
| 电话号码<br>(H.P) | | | 安装日期 | | |
| 销售点 | | | 安装人员<br>姓名 | 电话号码<br>(H.P) | |

※没有A/S产品保修卡时，被认定为有偿修理服务，所以请保管好此卡。

※公司联系号码

iRevo Inc.
上海易保电子有限公司
中国上海市闵行区先锋街25号宝纳大厦9楼E,F室（邮编 ： 201103）
电话 ：（021）6446-4067 传真 ：（021）6406-0521

客户中心
400-880-7858

YDM3112도 큐 2012.6.15 5:28 PM 페이지 42 NO.3 PDF in

# MEMO

YDM3112도 큐 2012.6.15 5:28 PM 페이지 43 NO.3 PDF in

# MEMO

YDM3112도 큐 2012.6.15 5:28 PM 페이지 44 NO.3 PDF/m

An ASSA ABLOY Group brand

ASSA ABLOY

ISL-1371-01